

## ***Installation***

This chapter describes installation of the *AVR* Assemblers and Simulator in MS-DOS and Windows. The Assemblers and Simulator are delivered on a diskette containing an MS-DOS command line version of the Assembler, a Windows version of the Assembler, a Windows version of the Simulator, help files and example programs. Both the MS-DOS and the Windows installation procedures described below will install both MS-DOS and Windows versions of the *AVR* Development tools.

### **MS-DOS**

In order to install the *AVR* development tools from MS-DOS, run the supplied batch file `INSTALL.BAT` with the destination path as parameter. Note that you must change the default drive to the diskette drive before installing.

#### **Example:**

```
C:\> A:  
A:\> install C:\AVR\AVRTOOLS\
```

This example would install the *AVR* Development tools on `C:\AVR\AVRTOOLS`.

### **Windows 3.1x, Windows95 and Windows NT**

In order to install the *AVR* Development tools under Windows, run the supplied `SETUP.EXE` file and then follow the instructions. This program will install the *AVR* Development tools on the specified location and will also generate Windows program groups.

---

---

**8-Bit AVR**  
**Assembler and**  
**Simulator**

---

---

