

**MODIFICATION INSTRUCTION SHEET No DX/7
(SUPERSEDES FIELD MODIFICATION DX5)**

Issue 2/Cat 1

EQUIPMENT AFFECTED: BridgeMaster E EPA Processors, 65800P--- fitted with issue 1, 2 or 3 radar processors AND software versions 1.02, 1.03, 2.00, 2.02 or 2.04.

APPLICATION: Mandatory, at next service

OBJECT AND METHOD: To improve video presentation and enhance operation (if DX5 not previously actioned) and to activate the Graphics reset alarm function.

Fitting of version 2.05 software will provide:-

1. Improved Guard Zone operation.
2. Operation of A/C Rain & Sea, Gain, Man/Auto boxes after editing maps.
3. Improved setting of turndown value for an Issue 4 Radar PCB.
4. Improved Compass Alarm sensitivity performance.

Replace Radar Processor with Issue 4 or later

Replace Flash Assemblies 32FAA007 or 009, 32FAB007, 32FAC007 with 32FAA010, 32FAB010, 32FAC010 (Older versions of software with lower numbers eg:32FAA003 etc, can also be replaced)

NOTE: This Software also removes the hidden trails function.

TIME REQUIRED: 1 Hour + 2 Hours travelling time maximum

PROCEDURE:

Note: Ensure anti-static precautions are taken when handling electronic assemblies and components.

- 1 Switch off the radar system and isolate it from the ship's supply.
- 2 Referring to the Ships Manual, 65800010B, Chapter 6. From the Processor Unit remove the Display and Radar Processor PCBs.
3. On the Display Processor PCB
 - a) Remove FLASH PCB's 32FAB007 and 32FAC007 and replace them with 32FAB010 and 32FAC010 respectively, ensuring the alignment arrows point together.
 - b) Ensure link LK6 is set 1-2.
4. On the new Radar Processor PCB (65800815), place FLASH PCB (32FAA010) between

PLEL and PLEM, ensuring the alignment arrows point together.

- 5 Referring to the Ships Manual, 65800010B, Chapter 6, replace the Display Processor PCB and the new Radar Processor PCB and re-assemble the Processor unit.
6. **The three FLASH PCB's and the old radar PCB are to be retained and returned to Mr. J. Donovan, LMS, New Malden, UK.**
7. Restore ship's power and at the display :-
 - a) Select the 'SYSTEM' menu.
 - b) Select the 'SYSTEM STATUS' menu
 - c) Check the 'DISPLAY', 'GRAPHICS' and 'RADAR' versions are 2.05.
- 8 Check that Radar operation is fully restored.
- 9 Note:- Different gain settings are stored for 'MANUAL' and 'AUTO' modes. These settings may need adjusting after this modification.

MANUAL AMENDMENTS:

Insert a copy of this Modification in the Ships Manual, 65800010B, Chapter 8, 'MODIFICATIONS'.

MATERIALS REQUIRED:

Item	Description	Code No	Qty
1	Radar Processor (Issue 4 or later)	65800815	01
2	Radar Flash PCB	32FAA010	01
3	Graphics Flash PCB	32FAB010	01
4	Display Flash PCB	32FAC010	01