 


Product: Decca BridgeMaster E Series Radars


Subject: General Information 9

1. X Band Antenna Locking Tabs

Please note the X Band Antenna Locking Tabs have changed as below:



OLD TYPE 65602116

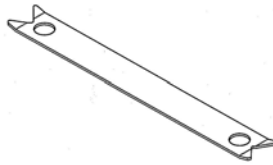

CURRENT TYPE 65602122

2. Minimum Software levels for field upgrades from CRT to FPD

The minimum software levels for field upgrades from CRT FPD Monitors:

Model	FPD Kit	Minimum Software level
180	65815C	None (<i>System Status may report Monitor Type as 340</i>)
250	65817C	Version 3.0
340	65823E	Version C4.06

3. AIS Dongle no longer required

From software version **C5.03** and above, the AIS can now be enabled WITHOUT the need for the AIS Dongle. Please bear this in mind when referring to Service Bulletin No. 47 (AIS Installation/Commissioning). *Of course you will still require a 65847A Serial Interface Unit.*

4. DCU power requirements

You are reminded that the Display Compatibility Unit requires **+15V** and **-15V** to function. On a standard installation this power comes from the BridgeMaster (I or II) Display. On installations that do not have a BM Display but has a DCU installed (connected to either ISW or SJB) to provide radar data to an ECDIS etc, the power **MUST** come from an external Power Supply. On **NO** account should the +12V and -12V from the BME Processor should be used.