

Thank you for purchasing this Factory Service Manual CD/DVD from [servicemanuals4u.com](http://servicemanuals4u.com).

Please check out our eBay auctions for more great deals on Factory Service Manuals:

[servicemanuals4u](http://servicemanuals4u)

# maintenance & service guide

**Presario 1200XL Series**  
**Models: XL300, XL300A, and XL300B**

## Product Description

### Models and Features

<b>Compaq Presario 1200 Series Portable Notebook Computer Models</b>			
<b>Feature</b>	<b>XL300</b>	<b>XL300A</b>	<b>XL300B</b>
<b>Display</b>	12.1 in HPA	12.1 in HPA	12.1 in HPA
<b>Processor</b>	Cel/566 (128) FCPGA	Cel/566(128) FCPGA	Cel/566(128) FCPGA
<b>Hard Drive</b>	5.0 GB	5.0 GB	5.0 GB
<b>CD or DVD Drive</b>	24X CD-Rom	24X CD-Rom	24X CD-Rom
<b>Diskette Drive</b>	1.44 Std. Diskette	1.44 Std. Diskette	1.44 Std. Diskette
<b>Modem</b>	56K Mini PCI d/f 1, Bear*	56K Mini PCI d/f 1, Bear*	56K Mini PCI d/f 2, Seminole*
<b>Networking</b>	None	None	None
<b>Battery</b>	3.8 NiMH	3.8 NiMH	3.8 NiMH
<b>System Memory</b>	32 MB	32 MB	64 MB

\* *Modem Legend*

1) 56K Mini PCI d/f 1 = Bear/Grizzly Modem/NIC Combo = NA, CKK, LA

2) 56K Mini PCI d/f 2 = Seminole = EMEA/APD


3) 56K Mini PCI d/f 3 = Seminole 2 = All AUS/NZ

1.800.AT.COMPAQ

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## Front of Unit

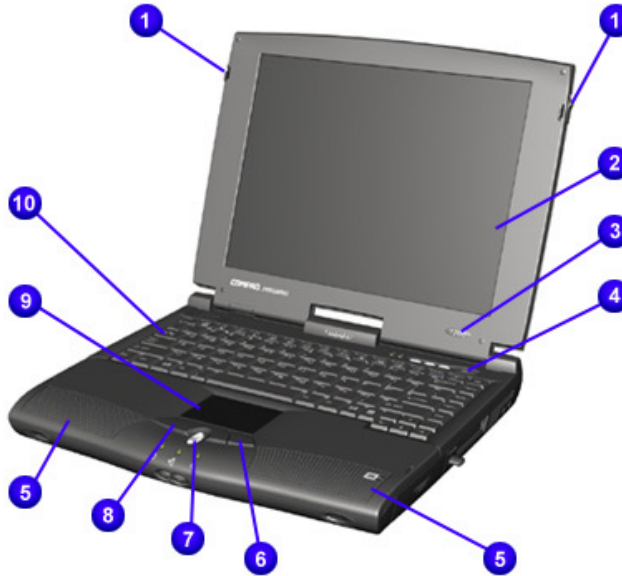


Description	
❶ Display Release Latch	❹ Right TouchPad Button
❷ Display	❺ Scroll Button
❸ Model Number	❻ Left TouchPad Button
❹ Power (On/Off) Button	❼ TouchPad
❺ Speakers	❽ Keyboard

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## *Internet Zone Buttons and Lights*

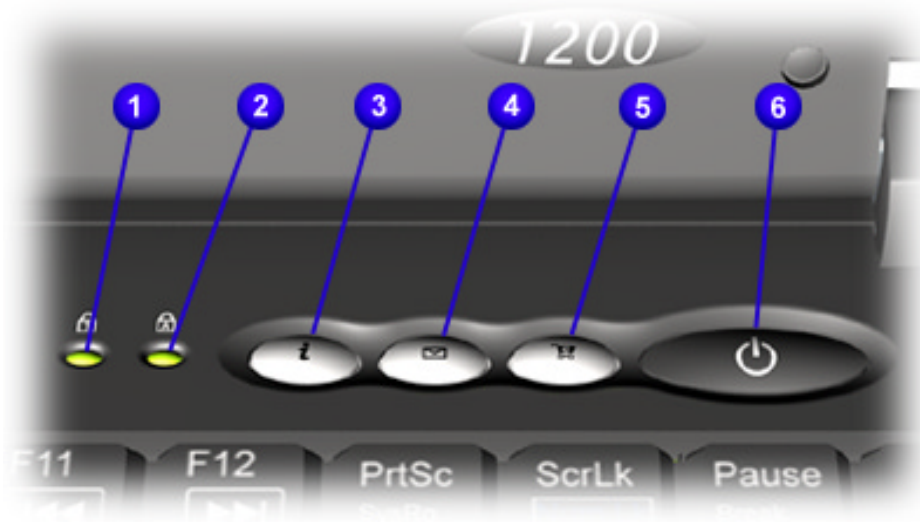


### Description

①	Num Lock Light	④	Instant E-mail Access Button
②	Caps Lock Light	⑤	Retail Central Button
③	Instant Internet Access Button	⑥	Power Button

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## Front Bezel Components

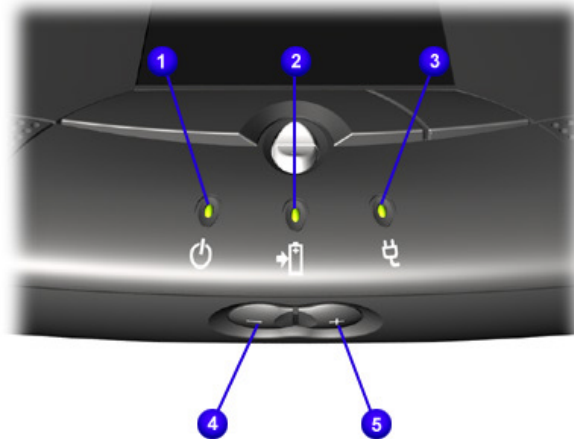


Description	
❶ Power (On/Off) Light	❷ Volume Down Button
❸ Battery Charge Light	❹ Volume Up Button
❺ AC Power Light	

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## *Right-Side Components*

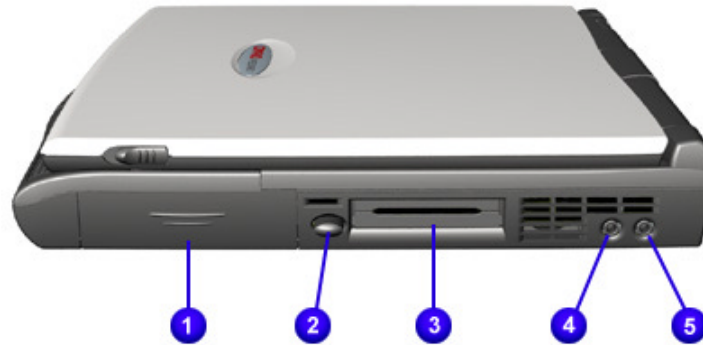


Description	
❶	Battery Compartment
❷	PC Card Eject Button
❸	PC Card Slot
❹	Microphone Jack
❺	Headphone Jack

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## *Left-Side Components*

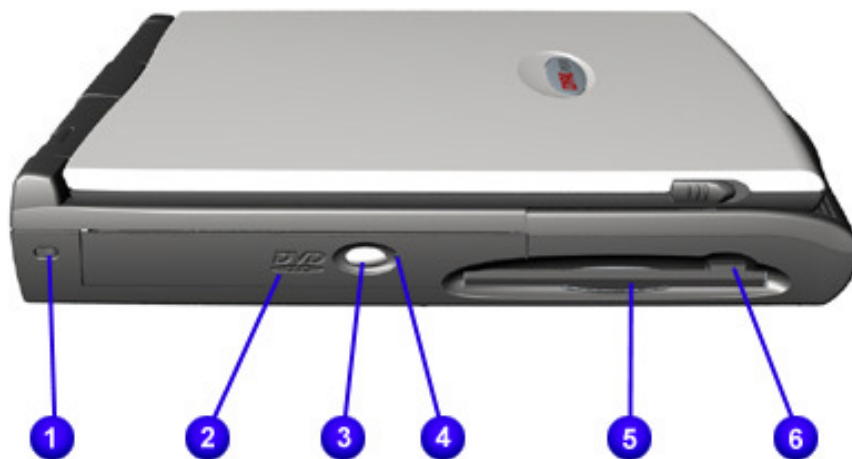


Description	
❶ Security Slot	❷ CD or DVD Player
❸ CD/DVD Eject Button	❹ CD or DVD Manual Eject Hole
	❺ Diskette Drive
	❻ Diskette Drive Eject Button

# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## *Underneath the Unit*

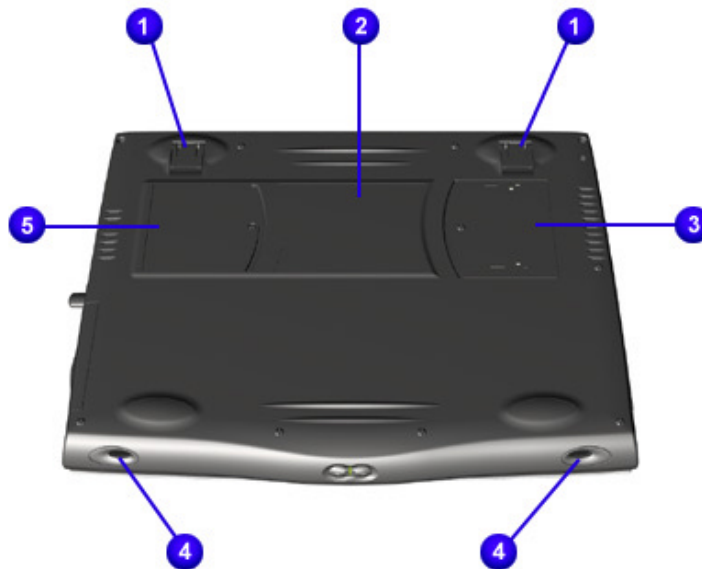


Description	
❶ Stand Feet	❷ Speaker Ports
❸ Serial and Model Number Location	❹ Modem Compartment
❺ Memory Compartment	



# maintenance & service guide

**Presario 1200XL Series**  
Models: XL300, XL300A, and XL300B

## Rear Connectors

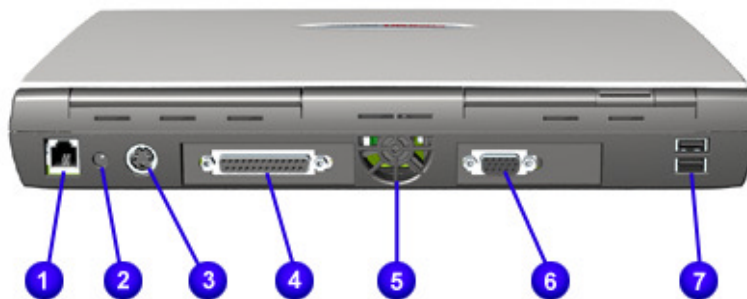

Description	
❶	Modem
❷	AC Power
❸	Keyboard/Mouse Port
❹	Printer/Parallel Port
❺	Fan Vent
❻	VGA External Monitor
❼	USB Ports