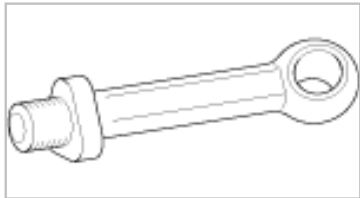
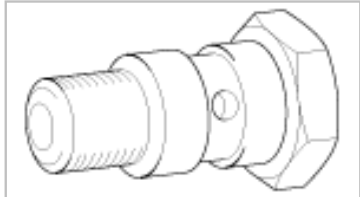

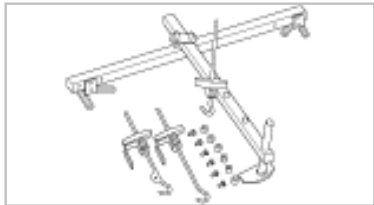
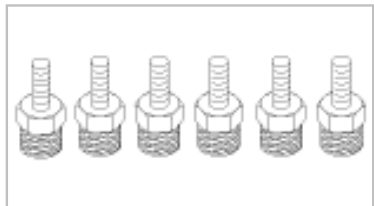
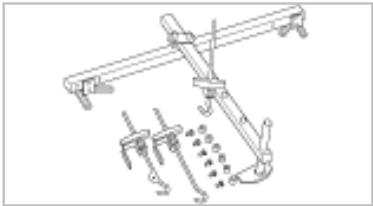





SPECIAL TOOLS

Tool (Number and name)	Illustration	Use
09452-21001 Oil pressure gauge adapter		Measurement of the oil pressure. (Use with 09452-21002 and 09452-21500)
09452-21002 Oil pressure gauge adapter		Measurement of the oil pressure. (Use with 09452-21500 and 09452-21001)
09452-21500 Oil pressure gauge		Measurement of the oil pressure. (Use with 09452-21001 and 09452-21002)
J28467-B Engine support fixture		Removal and installation of transaxle assembly.
J28467-125 Engine support adapters		Use with J28467-B

SPECIAL TOOLS

Tool (Number and name)	Illustration	Use
J28467-B Engine support fixture		Removal and installation of transaxle assembly

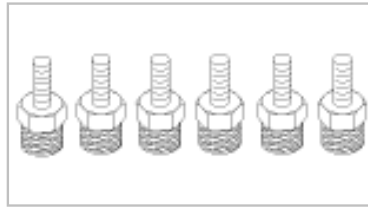J28467-125
Engine support adapters



Use with J28467-B