



REMOVAL

1. Disconnect the negative(-) battery terminal.
2. Disconnect the 2P connector (A) then remove the front fog lamp from the front bumper.




3. Installation is the reverse of removal.

INSPECTION

FRONT FOG LAMP RELAY

1. Remove the front fog lamp relay (A) from the engine compartment relay box.
2. There should be continuity between the No.1 and No.2 terminals when power and ground are connected to the No.4 and No.3 terminals.
3. There should be no continuity between the No.1 and No.2 terminals when power is disconnected.

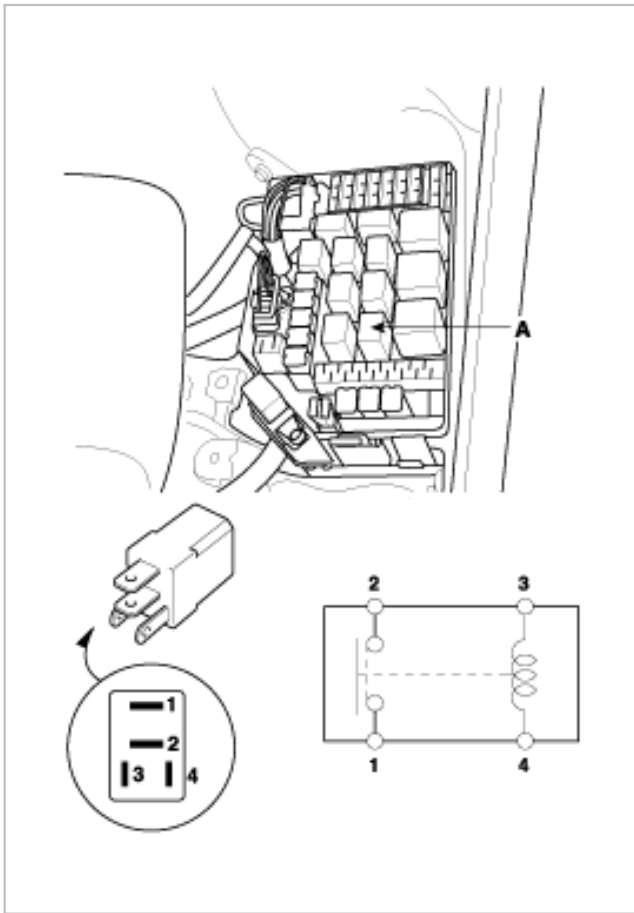

Terminal	1	2	3	4
Power (No.3-No.4)				
Disconnected			○ — ○	
Connected	○ — ○		○ — ○	+