




INSPECTION

HAZARD LAMP SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the hazard lamp switch (A) from the instrument facia panel and disconnect the 10P connector (B).

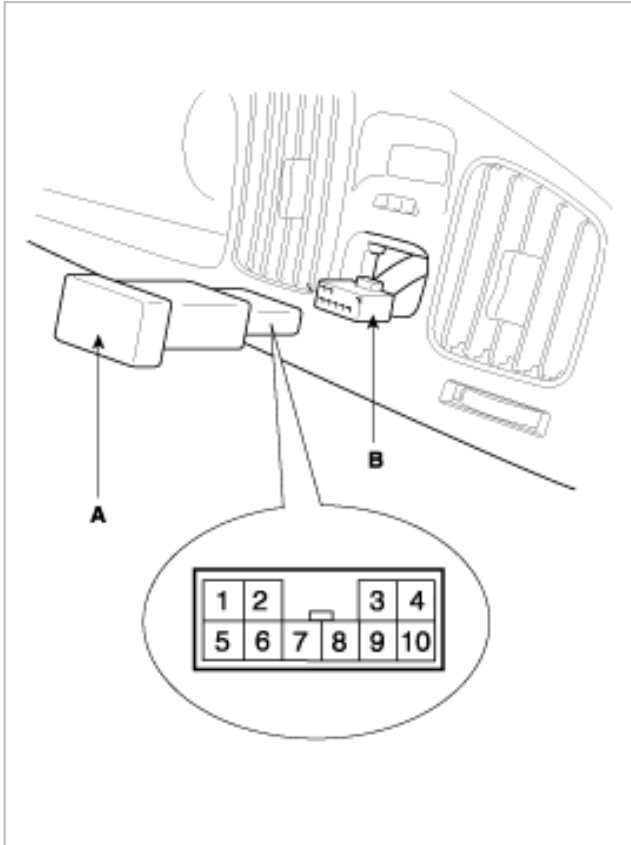


3. Operate the switch and check for continuity between terminals with an ohmmeter.

| Terminal Position | 6 | 7 | 1 | 3 | 4 | 8 | 9 | 10 |
|-------------------|---|---|---|---|---|---|---|----|
| OFF | ○ | ○ | | | | ○ | — | ○ |
| ON | ○ | ○ | ○ | — | ○ | | ○ | ○ |


ILL

HAZARD LAMP RELAY

1. Remove the hazard lamp relay (A) from the relay box(B).

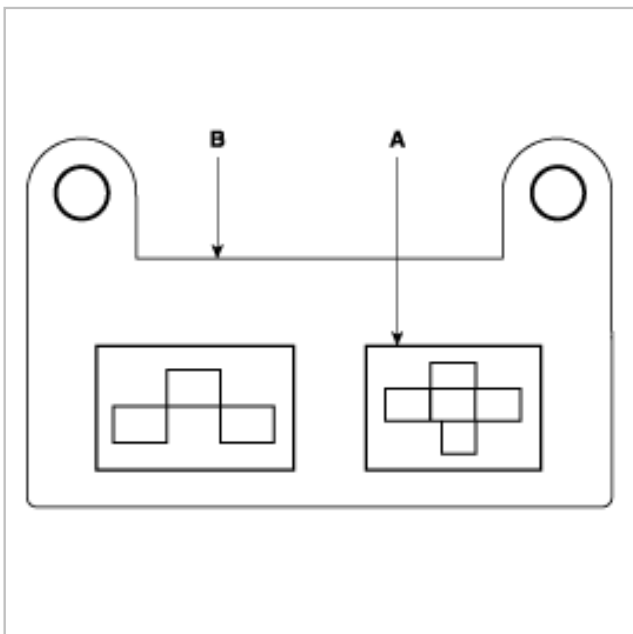

2. Check for continuity between terminals.

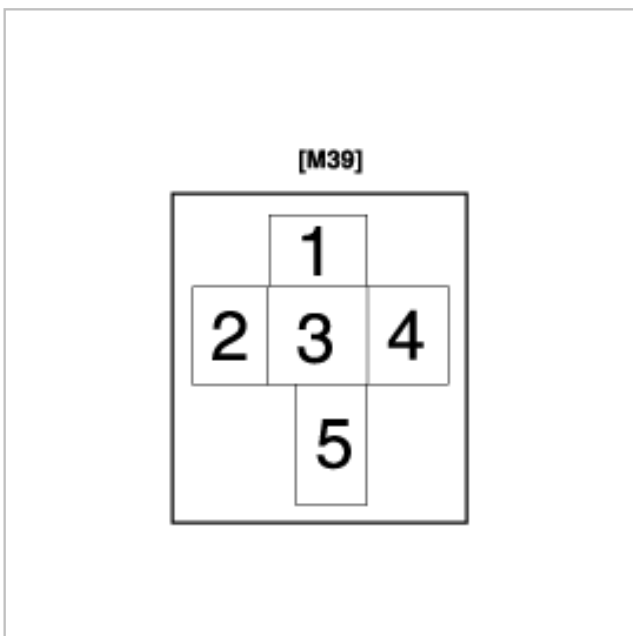

| Terminal | 2 | 4 | 1 | 3 | 5 |
|-------------------|-----|---|-------|---|---|
| Power (No.2-No.4) | | | | | |
| Disconnected | ○—○ | | | | |
| Connected | ⊕—⊖ | | ○—○—○ | | |