




REMOVAL

1. Disconnect the negative (-) battery terminal.
2. Open the trunk lid then remove the trunk room lamp with a flat-tip screwdriver and disconnect the 2P connector.
3. Replace the bulb.
4. Installation is the reverse of removal.

INSPECTION

TRUNK ROOM LAMP SWITCH

1. Disconnect the negative(-) battery terminal.
2. After opening the trunk, disconnect the 1P connector from the rear harness.

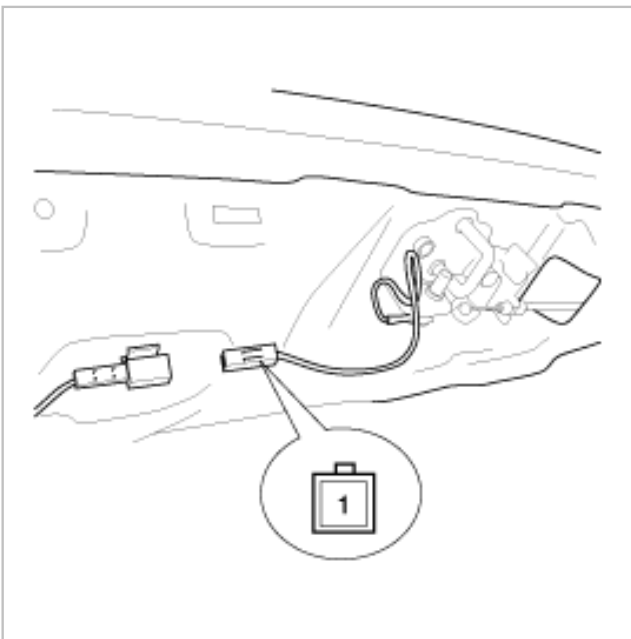

3. Check for continuity between the terminal and body while pushing the rod.

Switch rod condition	Continuity
Pushed (OFF)	Non-conductive (∞)
Released (ON)	Conductive (0)

