



## INSPECTION

1. Look for loose connections, sharp bends or damage to the fuel vapor lines.
2. Look for distortion, cracks or fuel leakage.
3. After removing the EVAP canister, inspect for cracks or damage.

