



OPERATION

The fuel filler cap is equipped with a vacuum relief valve to prevent the escape of fuel vapor into the atmosphere.

