



INSPECTION

Connect the battery voltage and check the blower motor rotation.

