


COMPONENT LOCATION INDEX

ENGINE ROOM

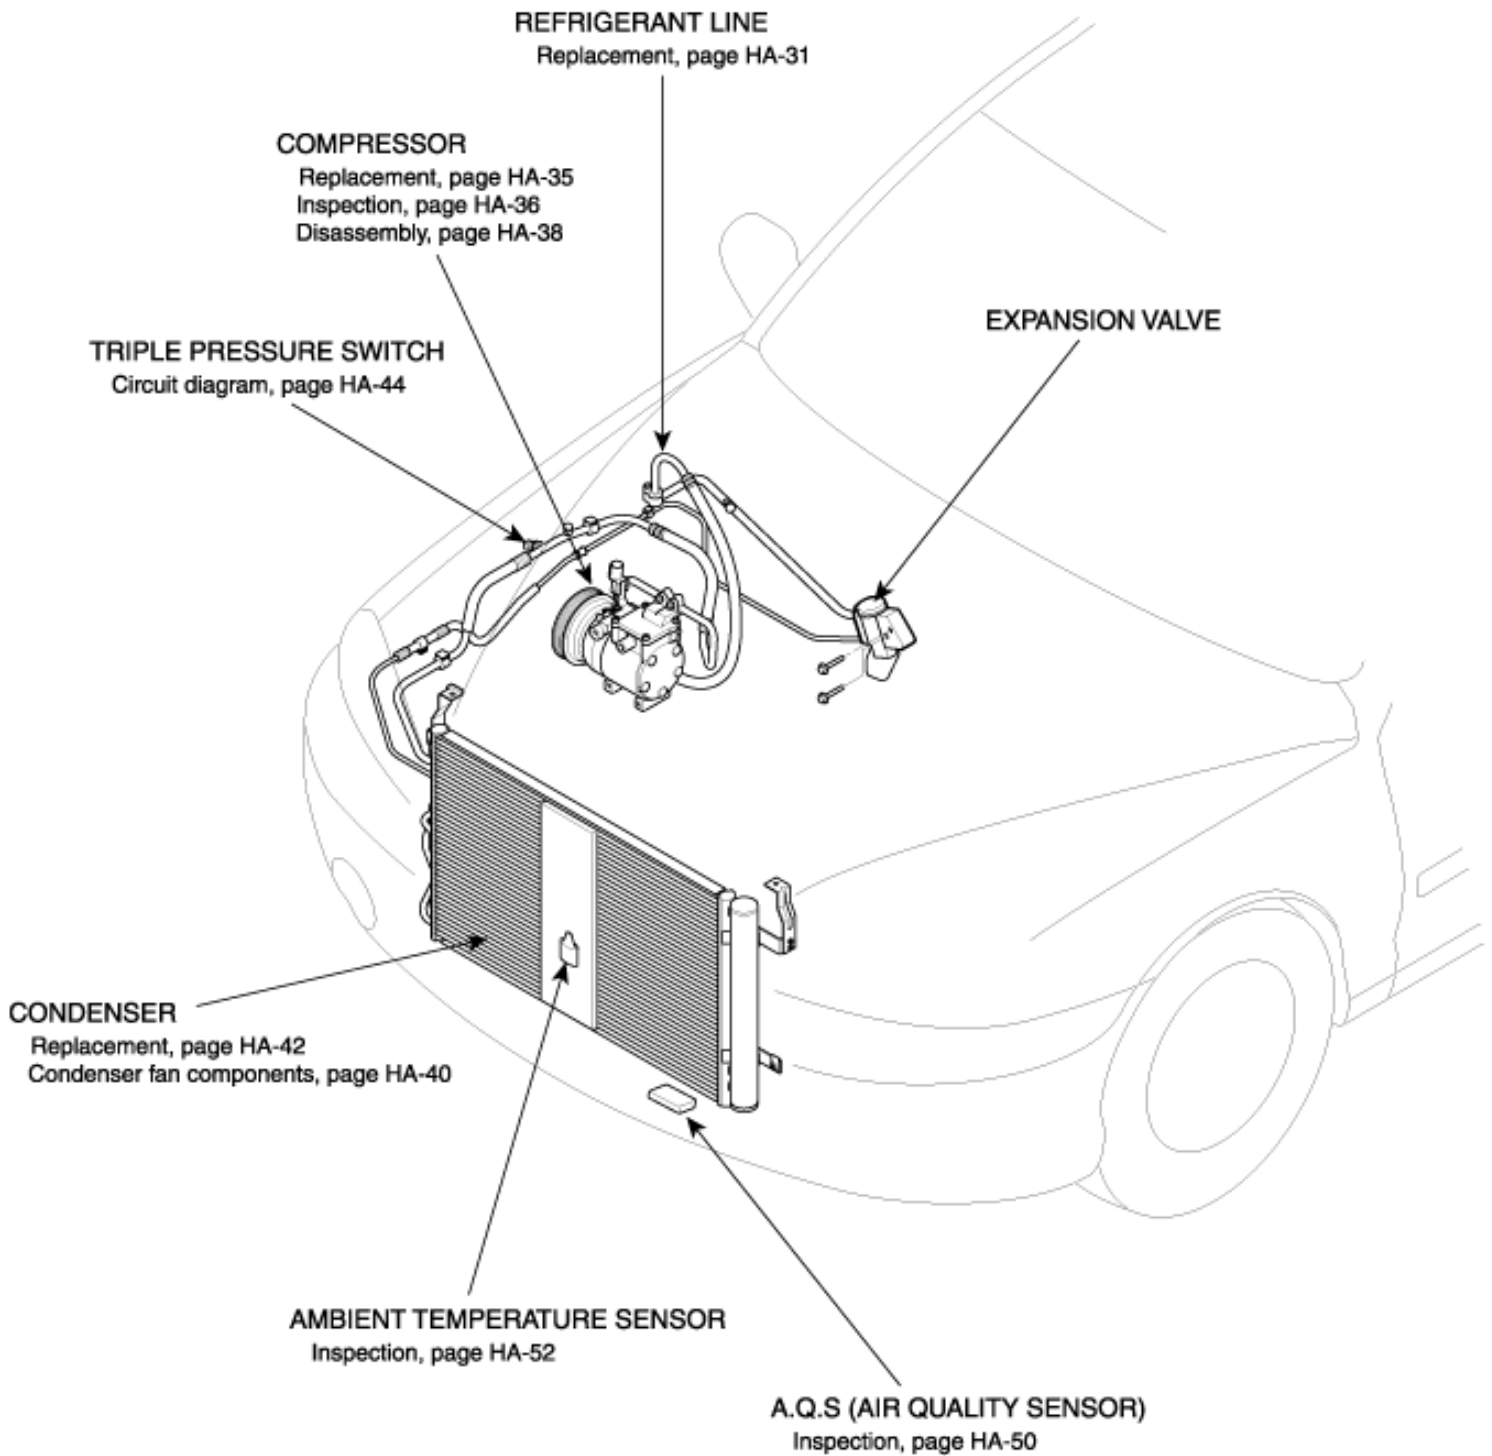

INTERIOR

PHOTO SENSOR


Inspection, page HA-48

HEATER UNIT

Replacement, page HA-62
Thermistor inspection, page HA-46
Temp. actuator replacement, page HA-55
Mode actuator replacement, page HA-57

BLOWER UNIT

Removal, page HA-66
Fresh and recirculation actuator replacement, page HA-59
Blower relay circuit diagram, page HA-68
Blower motor inspection, page HA-70
Blower resistor inspection, page HA-72
Power transistor circuit diagram, page HA-74

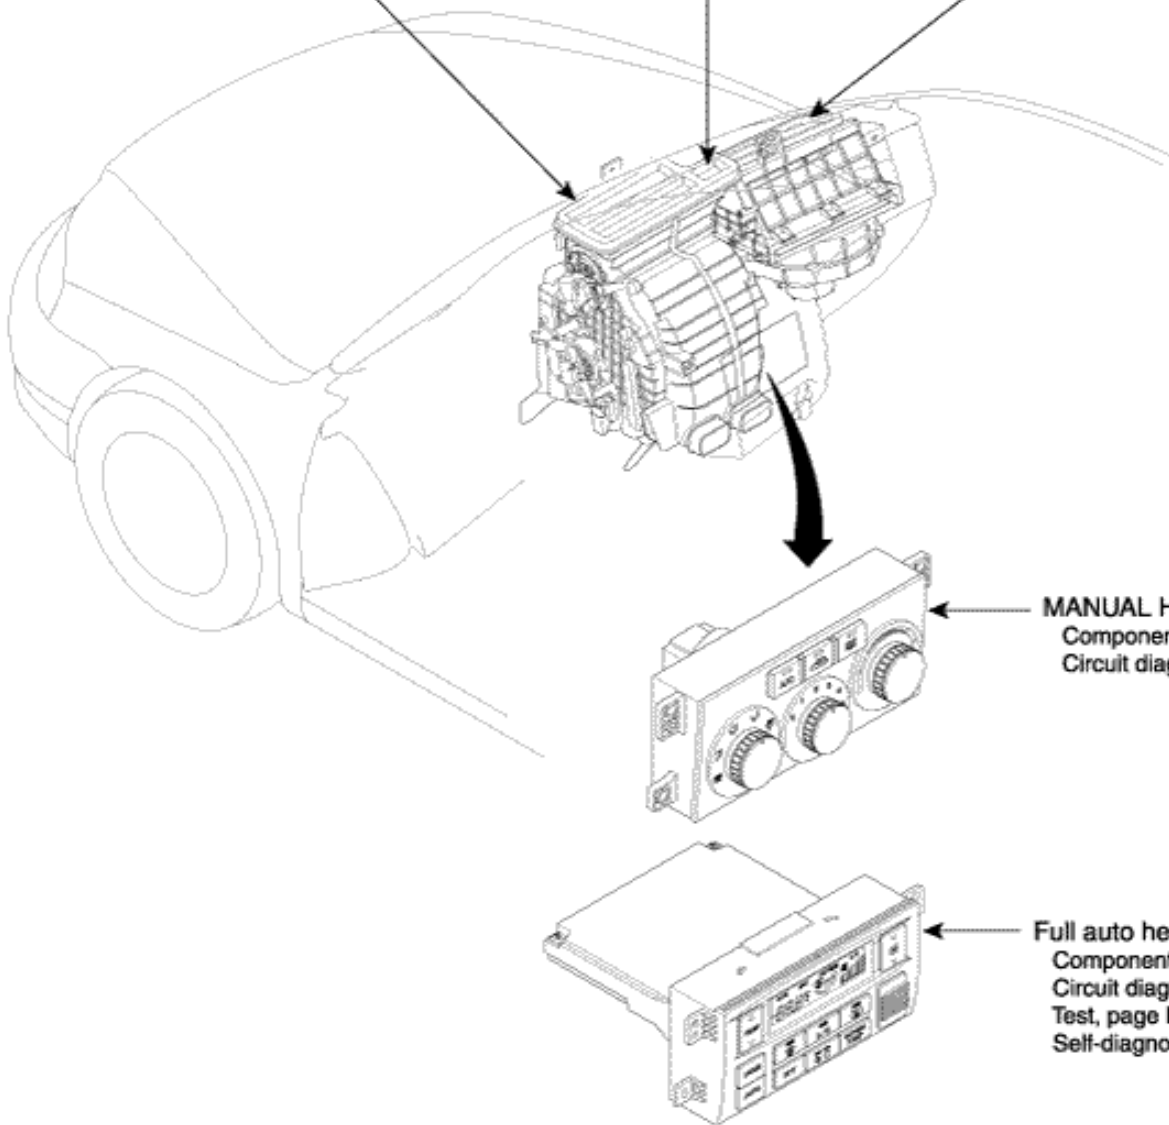

MANUAL HEATER CONTROL

Components, page HA-77
Circuit diagram, page HA-81

Full auto heater control

Components, page HA-85
Circuit diagram, page HA-97
Test, page HA-98
Self-diagnosis, page HA-15