




## REPLACEMENT

1. Remove the 7P connector (A) from the mode actuator (B). Remove the self-tapping screws and the mode actuator from the heater unit.

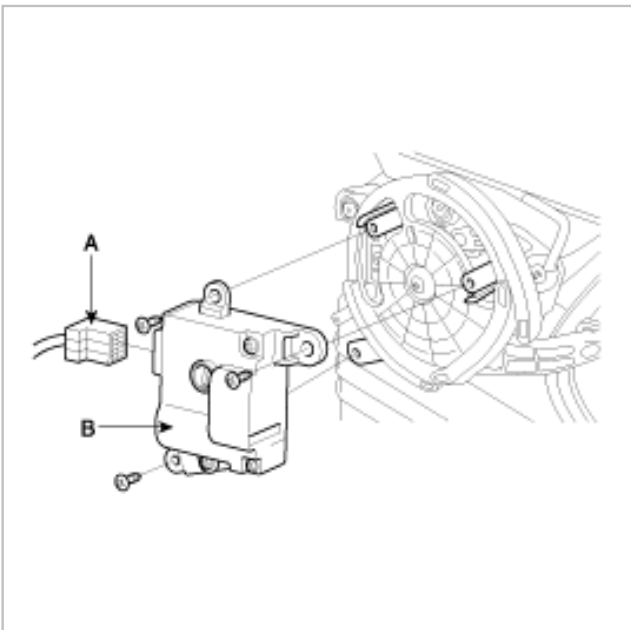

2. Install in the reverse order of removal. After installation, make sure the mode actuator runs smoothly.