



## DESCRIPTION

The photo sensor is located by the driver side defrost nozzle. In response to the photo intensity level in the vehicle, the sensor will send signals to control module to control the blower level and discharge temperature.