





REMOVAL

1. Remove the shift knob.
2. Remove the console assembly.
3. Remove the cotter pins and clips (shift lever side).
4. Remove the retainer(A) and bolts(B).

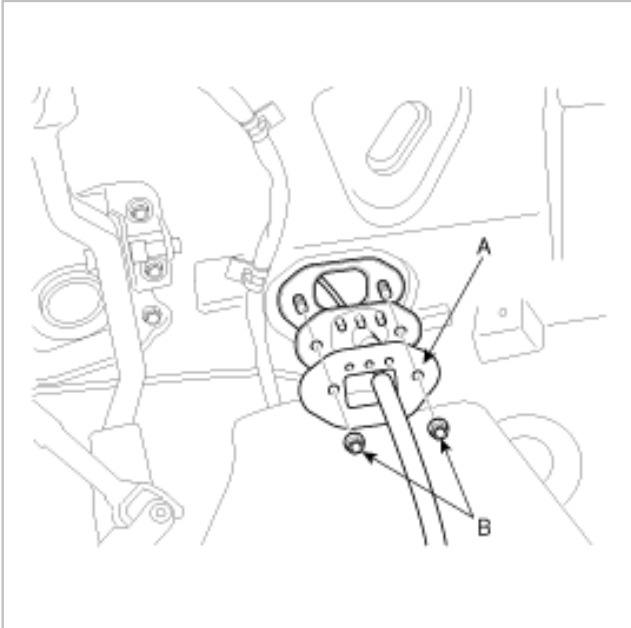

5. Remove the cotter pins and clips(A) (Transaxle side).

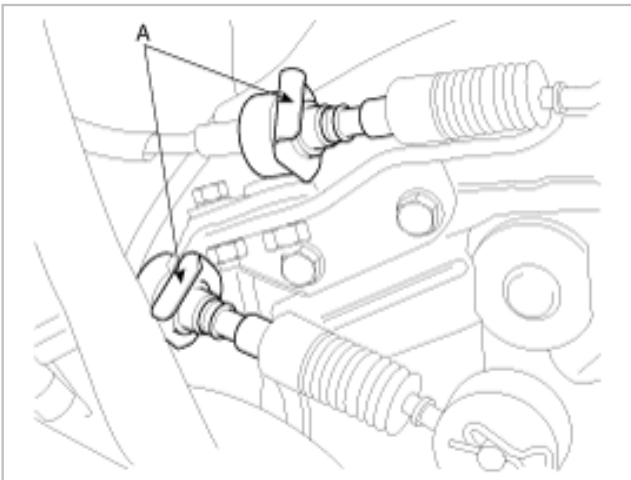

6. Remove the shift cable and selector cable.

INSTALLATION

1. Install the shift lever assembly.
2. Installation is the reverse of the removal.

INSPECTION

1. Check the select cable for proper operation and for damage.
2. Check the shift cable for proper operation and for damage.
3. Check the boot for damage.

4. Check each bushing for wear, abrasion, sticking, restricted movement or damage.
5. Check for a weak or damaged spring.