



## INSPECTION

1. Check the bushing for wear or damage.
2. Check the return spring for damage or deterioration.

## REASSEMBLY

1. Apply multi-purpose grease to the sliding part of the bushings.
2. Reassembly is reverse of the disassembly.