COMPONENTS

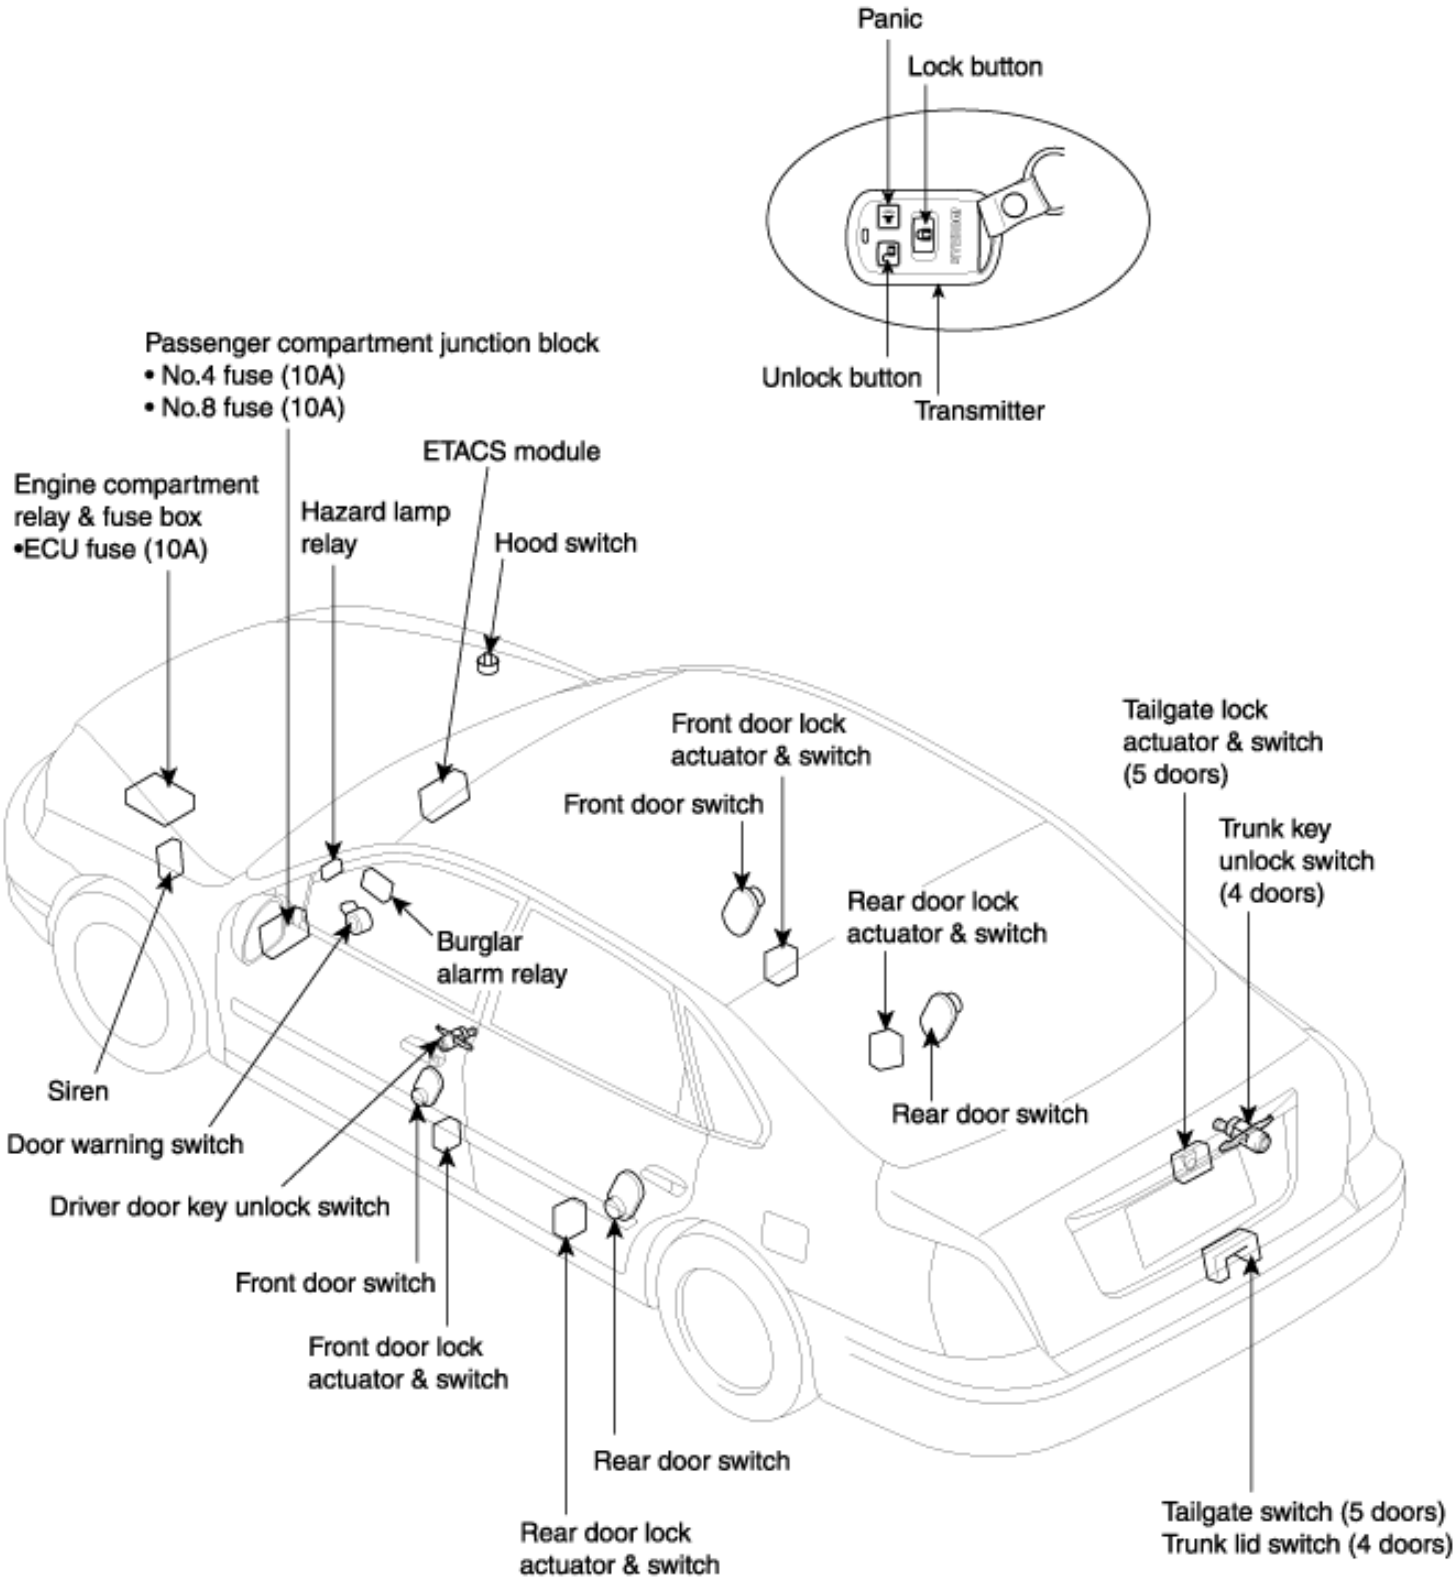
Panic
Lock button
Unlock button
Transmitter
Passenger compartment junction block
• No.4 fuse (10A)
• No.8 fuse (10A)
ETACS module
Engine compartment relay & fuse box
•ECU fuse (10A)
Hazard lamp relay
Hood switch
Front door lock actuator & switch
Front door switch
Tailgate lock actuator & switch (5 doors)
Trunk key unlock switch (4 doors)
Rear door lock actuator & switch
Burglar alarm relay
Rear door switch
Siren
Door warning switch
Driver door key unlock switch
Front door switch
Front door lock actuator & switch
Rear door switch
Rear door lock actuator & switch
Tailgate switch (5 doors)
Trunk lid switch (4 doors)