COMPONENTS

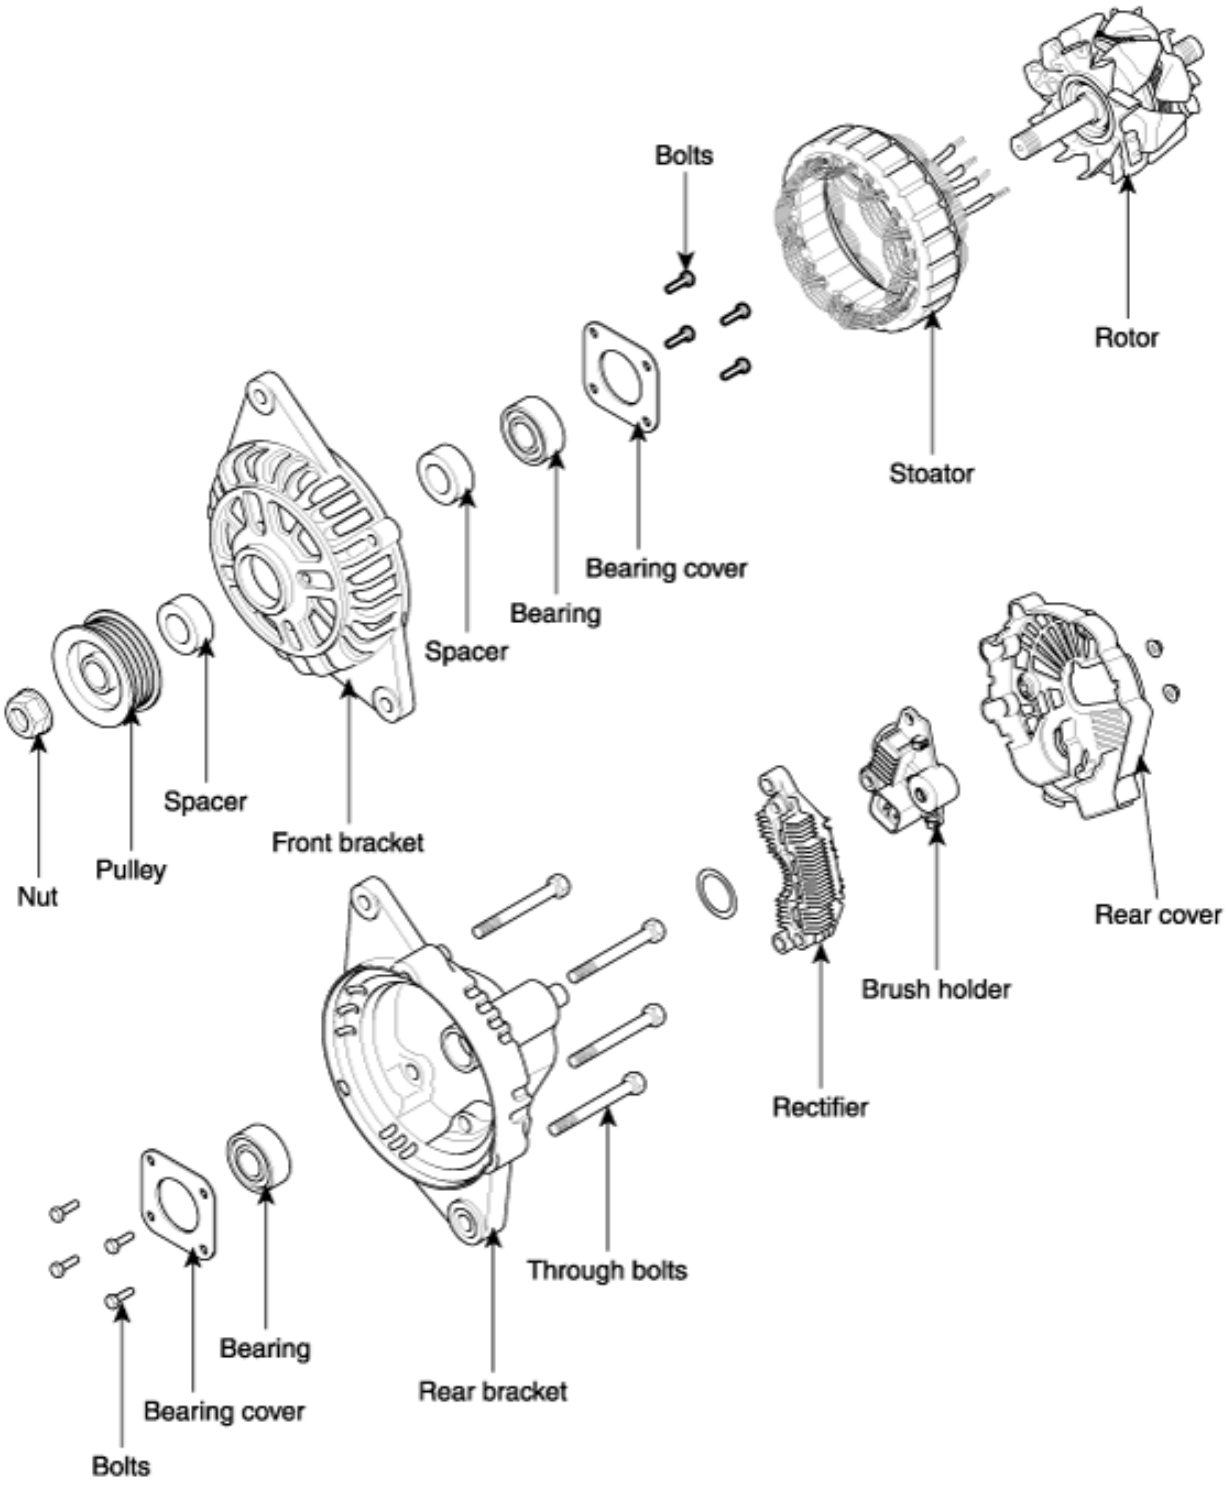
Bolts
Rotor
Stoator
Bearing cover
Bearing
Spacer
Spacer
Pulley
Nut
Front bracket
Brush holder
Rear cover
Rectifier
Through bolts
Rear bracket
Bearing
Bearing cover
Bolts