




INSPECTION

1. Disconnect the power door mirror connector from the harness.
2. Apply battery voltage to each terminal as shown in the table and verify that the mirror operates properly.

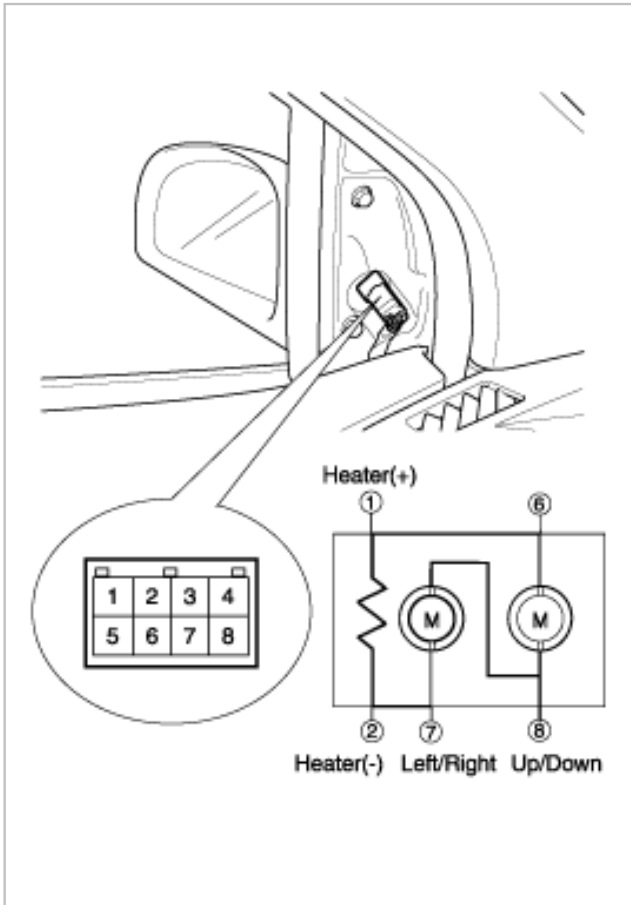

Terminal Position	6	7	8
UP	⊖	⊕	⊕
DOWN	⊕	⊖	⊖
OFF	⊕	⊕	⊕
LEFT	⊖	⊕	⊖
RIGHT	⊕	⊖	⊕

MIRROR HEATER INSPECTION

Terminal Position	1	2
Heater	○	○